



User Guide Wall-Mounted Kiosk



Contact

 
www.charitouch.com
info@charitouch.com
+33 7 83 11 65 00charitouch

1. Unpacking the kiosk

- Carefully open the box.
- Remove the wall-mounted kiosk along with the provided accessories (wall plugs and drilling template).
- Check that all equipment is present and in good condition.




Then place the kiosk on its side to begin assembling the frame.

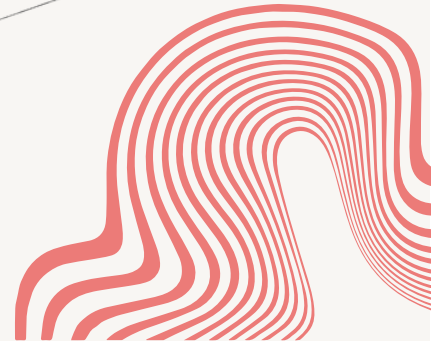

2. Wall preparation

 - Choose a solid, clean wall free of internal cables or pipes.
- Determine the installation height: the bottom of the kiosk must be 140 cm (approximately 55 inches / 4 ft 7 in) from the floor.

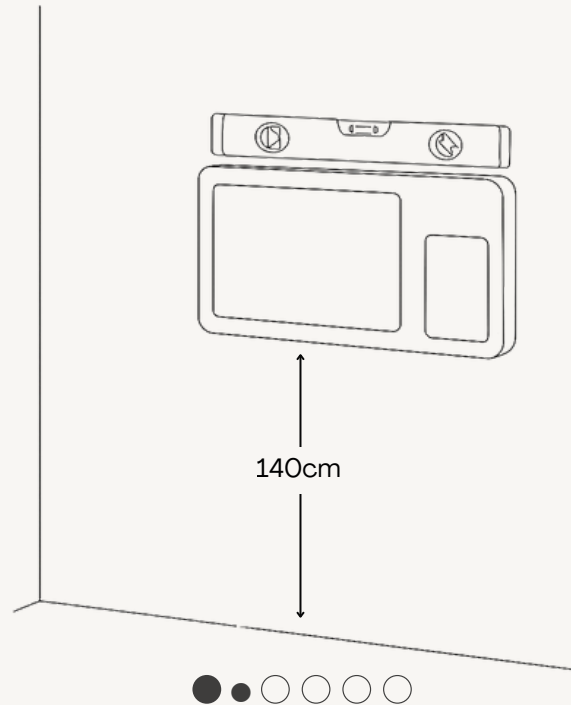

3. Positioning the drilling template

The provided template is to scale and precisely indicates the drilling points.

- Position it at the desired location.
- Use a level to ensure it is perfectly straight.
- Temporarily secure it to the wall using adhesive tape
- Percez directement au travers des icônes du gabarit : aucune mesure supplémentaire n'est nécessaire.



This template ensures accurate positioning and optimal alignment of the kiosk.



 
4. Wall drilling

- Drill at the locations indicated on the template.
- Then remove the template.
- Insert the wall plugs into the holes and make sure they are fully inserted.




5. Kiosk installation

- Align the holes on the back of the kiosk with the wall plugs installed in the wall.
- Hang or secure the kiosk according to its mounting system.
- Make sure it is properly locked, stable, and shows no movement.

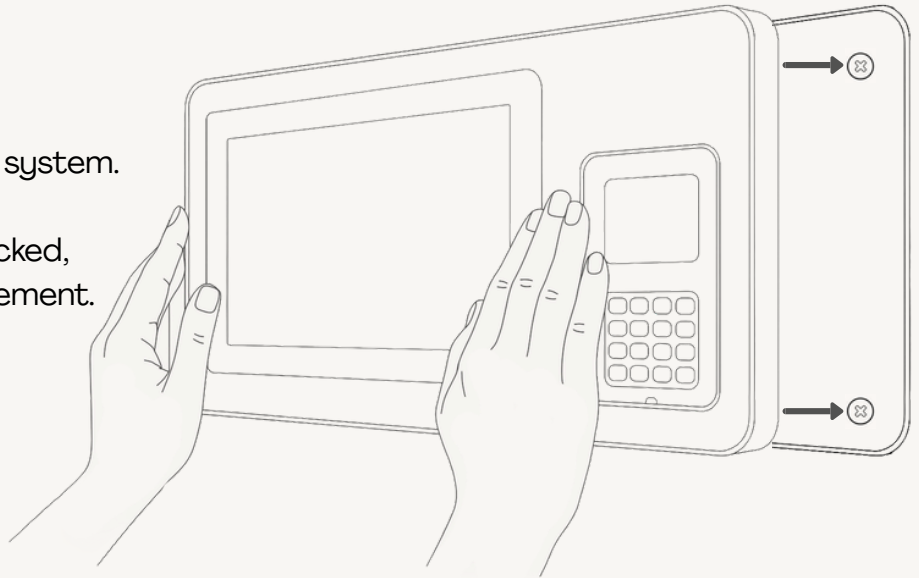

6. Connections (power and network)

 - Plug the kiosk into a wall outlet.
- Connect the RJ45 network cable or configure the Wi-Fi connection according to your setup.
- Organize or conceal the cables to achieve a clean and secure installation, ideally using a cable trunking.

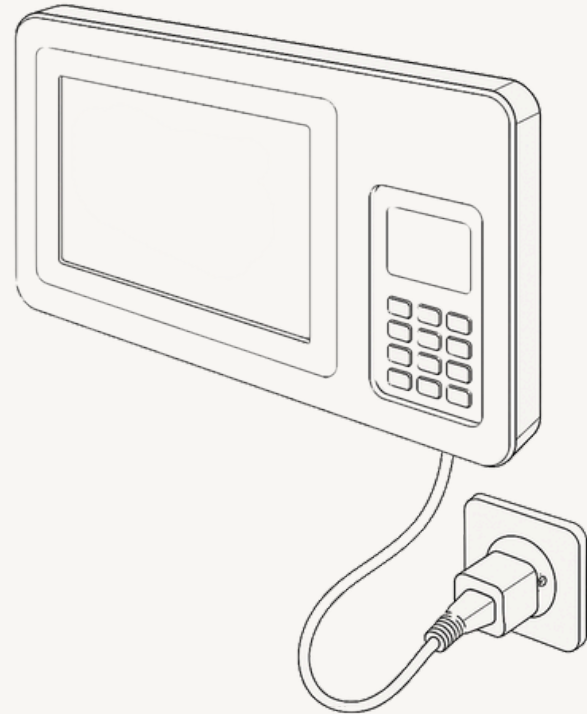

Installation complete

Your ChariTouch wall-mounted kiosk is now properly installed and ready to use.



Contact

www.charitouch.com
info@charitouch.com
+33 7 83 11 65 00charitouch

